



KRAZANA DESIGN STUDIOS, INC.

CHINOOK CIRCLE. POCONO LAKE, PA 18347

TRUNK LID KIT INSTALLATION INSTRUCTIONS (CARMEL)

STEP 1:

Remove four (x4) bolts as shown in FIG. 1

STEP 2:

Pull the plastic outer shell away from the vehicle chassis (approximately $\frac{3}{4}$ "-1").

Knock out the upper snap-in nut with a hammer. (The bottom snap-in nut remains in place)

Step 3:

Place the included template against the outer plastic shell as shown in FIG. 2 (template hole facing up).

*Ensure the leading edge of the template is leaning against the edge of the trunk.

*The plastic shell edge should sit in the template groove.

*Insert the template pin (protrusion) into the existing upper bolt hole.

Step 4:

Using the provided $\frac{1}{4}$ " drill bit, drill a hole through the template hole into the plastic shell and vehicle chassis.

Step 5:

Place the included spacer between the outer plastic shell and vehicle chassis:

*Fit the square protrusion into the chassis square cut-out.

*Align the spacer's round hole with the newly drilled hole.

Step 6:

Using the included 6mm stainless steel bolts and plastic washers, install the gas strut bracket.

*Ensure the ball stud is facing toward the center of the trunk.

Step 7:

Repeat Steps 2-6 on the opposite side.

Step 8:

Apply a piece of masking tape to the bottom edge of the trunk and mark the center point.

*Make additional marks on both sides, 1/16" away from the center.

Step 9:

With the help of a second person, carefully position the driver-side trunk lid:

*Align the inner edge of the lid with the 1/16" mark on the driver side.

*Ensure the hinge protrusion rests on the trunk's bottom edge.

Step 10:

Insert the provided self-tapping screws into the hinge holes (if necessary wrap the shaft of the screw with a masking tape so it fits snugly in to the hinge hole).

*Tap lightly with a hammer to mark the center points for drilling.

Step 11:

Remove the lid and drill holes at the marked centers using the included 9/64" drill bit.

Step 12:

Repeat Steps 9-11 for the passenger side.

Step 13:

Install the trunk lids using the provided spanner flathead screws and the included #10 spanner insert bit.

Step 14:

Install the gas struts:

*The angled end fitting must connect to the ball stud located inside the trunk.

Installation Complete

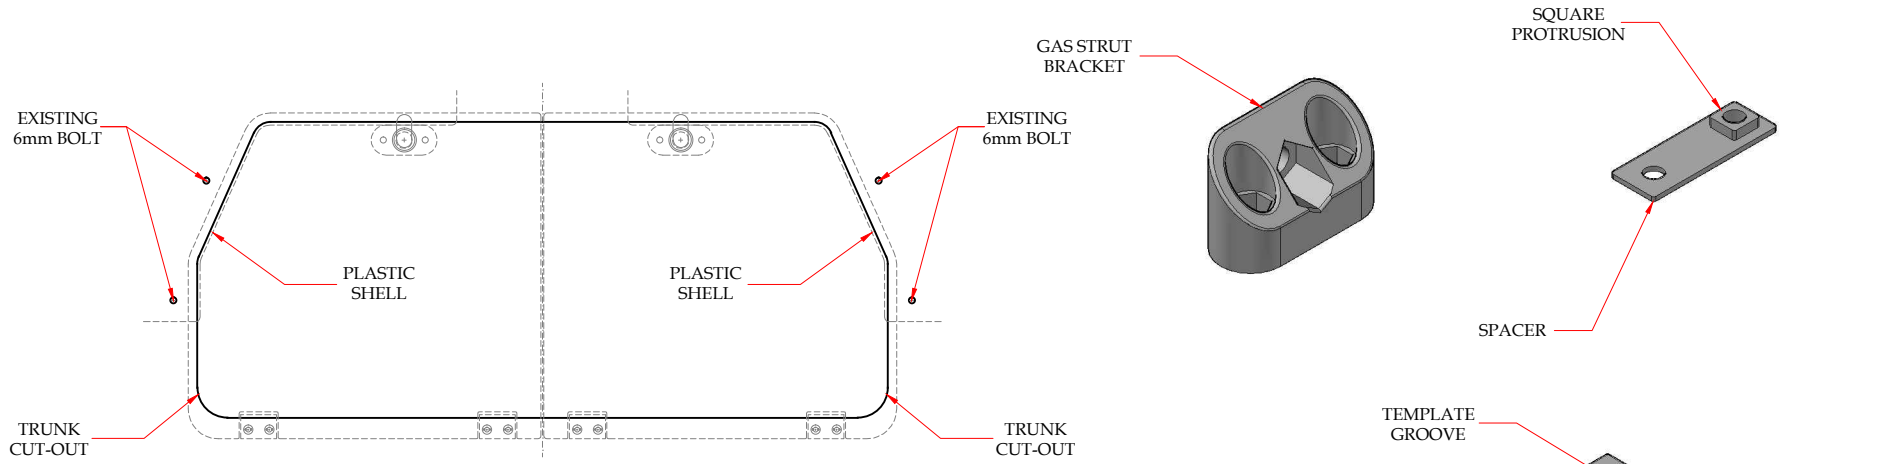


FIG.1


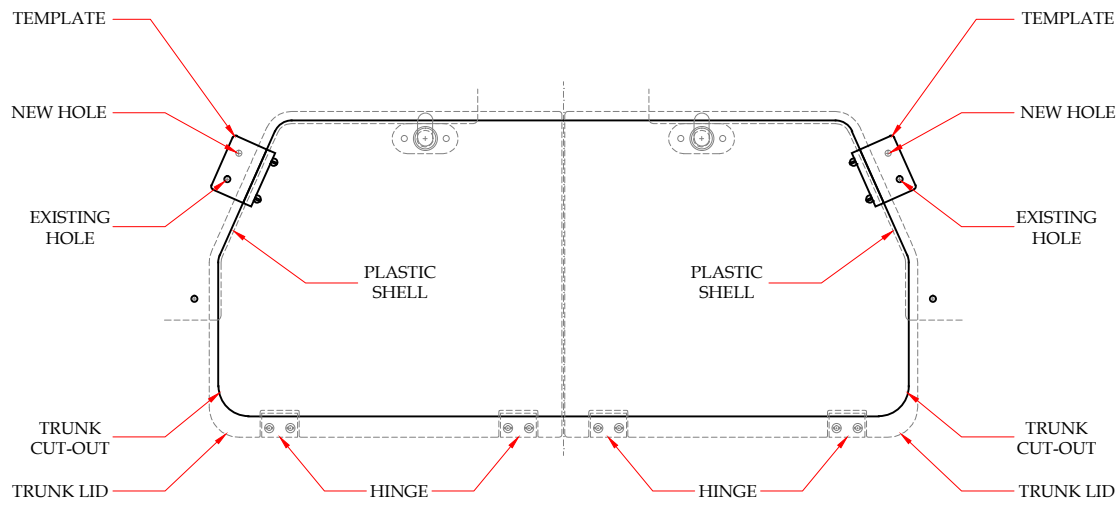


FIG.2

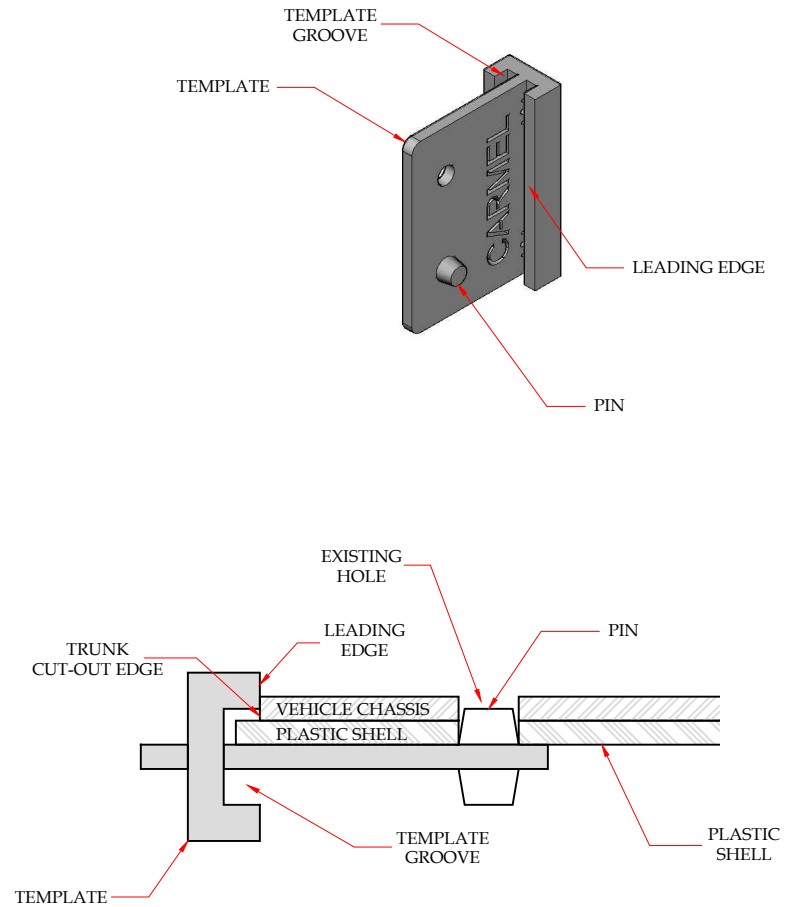

SECTION